Batterielevel pulsiert w\u00e4hrend des Ladevorgangs Am Strom angeschlossen FILL TANK WITH WATER Slide the tank release button and lift the device's body. Add water to the fill line indicated. Align the dots on the device body and tank to reassemble OOKA. CLICK HOSE Position the hose as indicated below and insert it until you hear a click. DROP AN OOKA POD Check if your OOKA pod has seals. Remove both the top and bottom seals (if any). • Press the (A) open button to open

QUICK START

1 CHARGE YOUR

Please charge your OOKA fully with

the power supply unit provided.

power level and pulsates while


• Green Light: Connected to power.

• White Light: Indicates Battery

OOKA

charging.

GUIDE

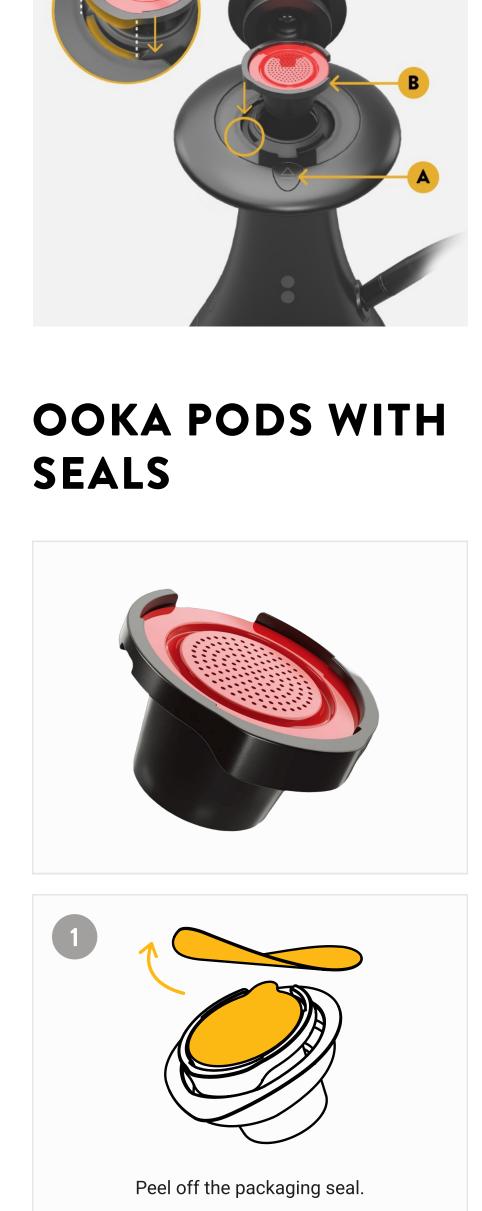

Take out the pod from its packaging.

Remove the top seal.

Remove the bottom seal.


Drop a pod in your OOKA and enjoy

your session.

the (B) Portal lid, drop a pod, and

close it.

SO EINLEGEN

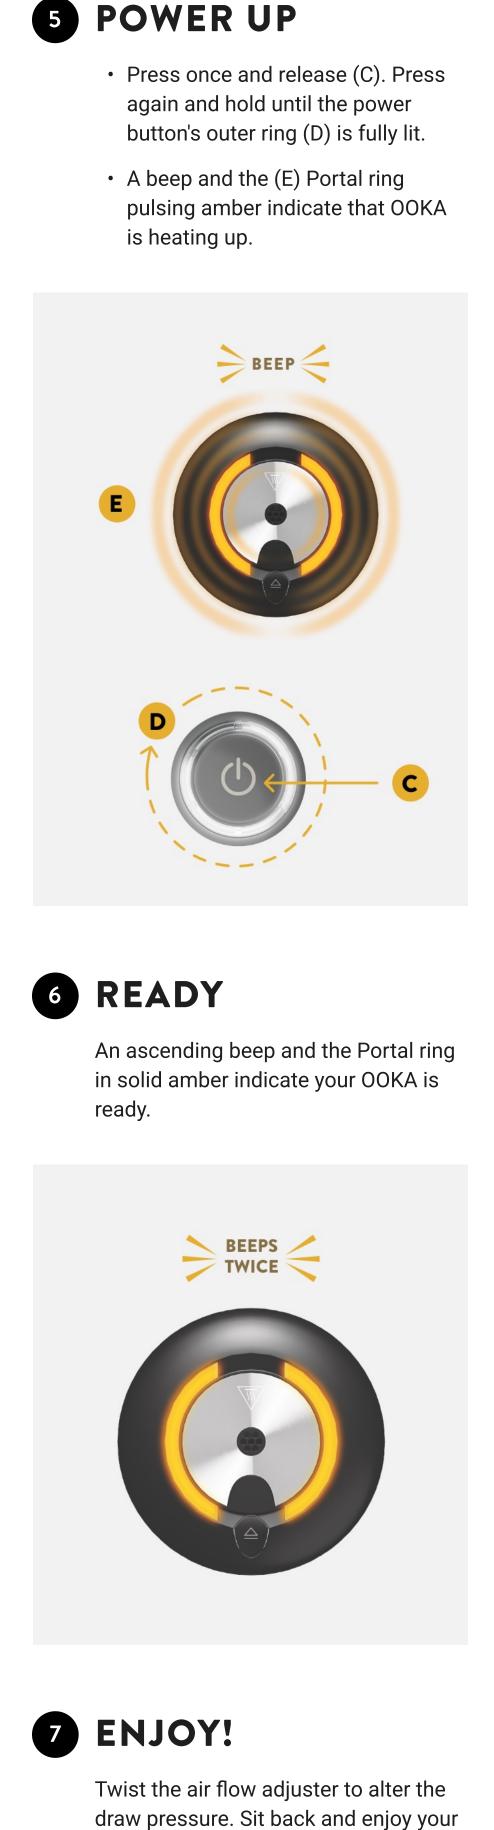

session. The cloud and taste will build

over time.

HOW THE

FINISHING &

CLEANING IS

EASILY DONE

SESSION

light goes off.

8 FINISHING YOUR

the end of a session.

· OOKA automatically switches off at

Alternatively, you can end your

OOKA session by pressing and

holding the power button until its

A descending beep and the Portal

POD Permoving THE POD Open the Portal lid. OOKA will beep to warn you of hot surfaces. Use tongs to remove the pod and dispose of it carefully.

CLEANING YOUR
OOKA

• Wait until the red Portal ring goes off.

• Remove the water from the tank.

• Use the OOKA brush to clean the inside of the device.

• Check out the OOKA cleaning video for more insights.

Seien Sie besonders vorsichtig. Die OOKA ist nicht wasserdicht